


EXPLODED DIAGRAM OF NV45AB

2017.09.13

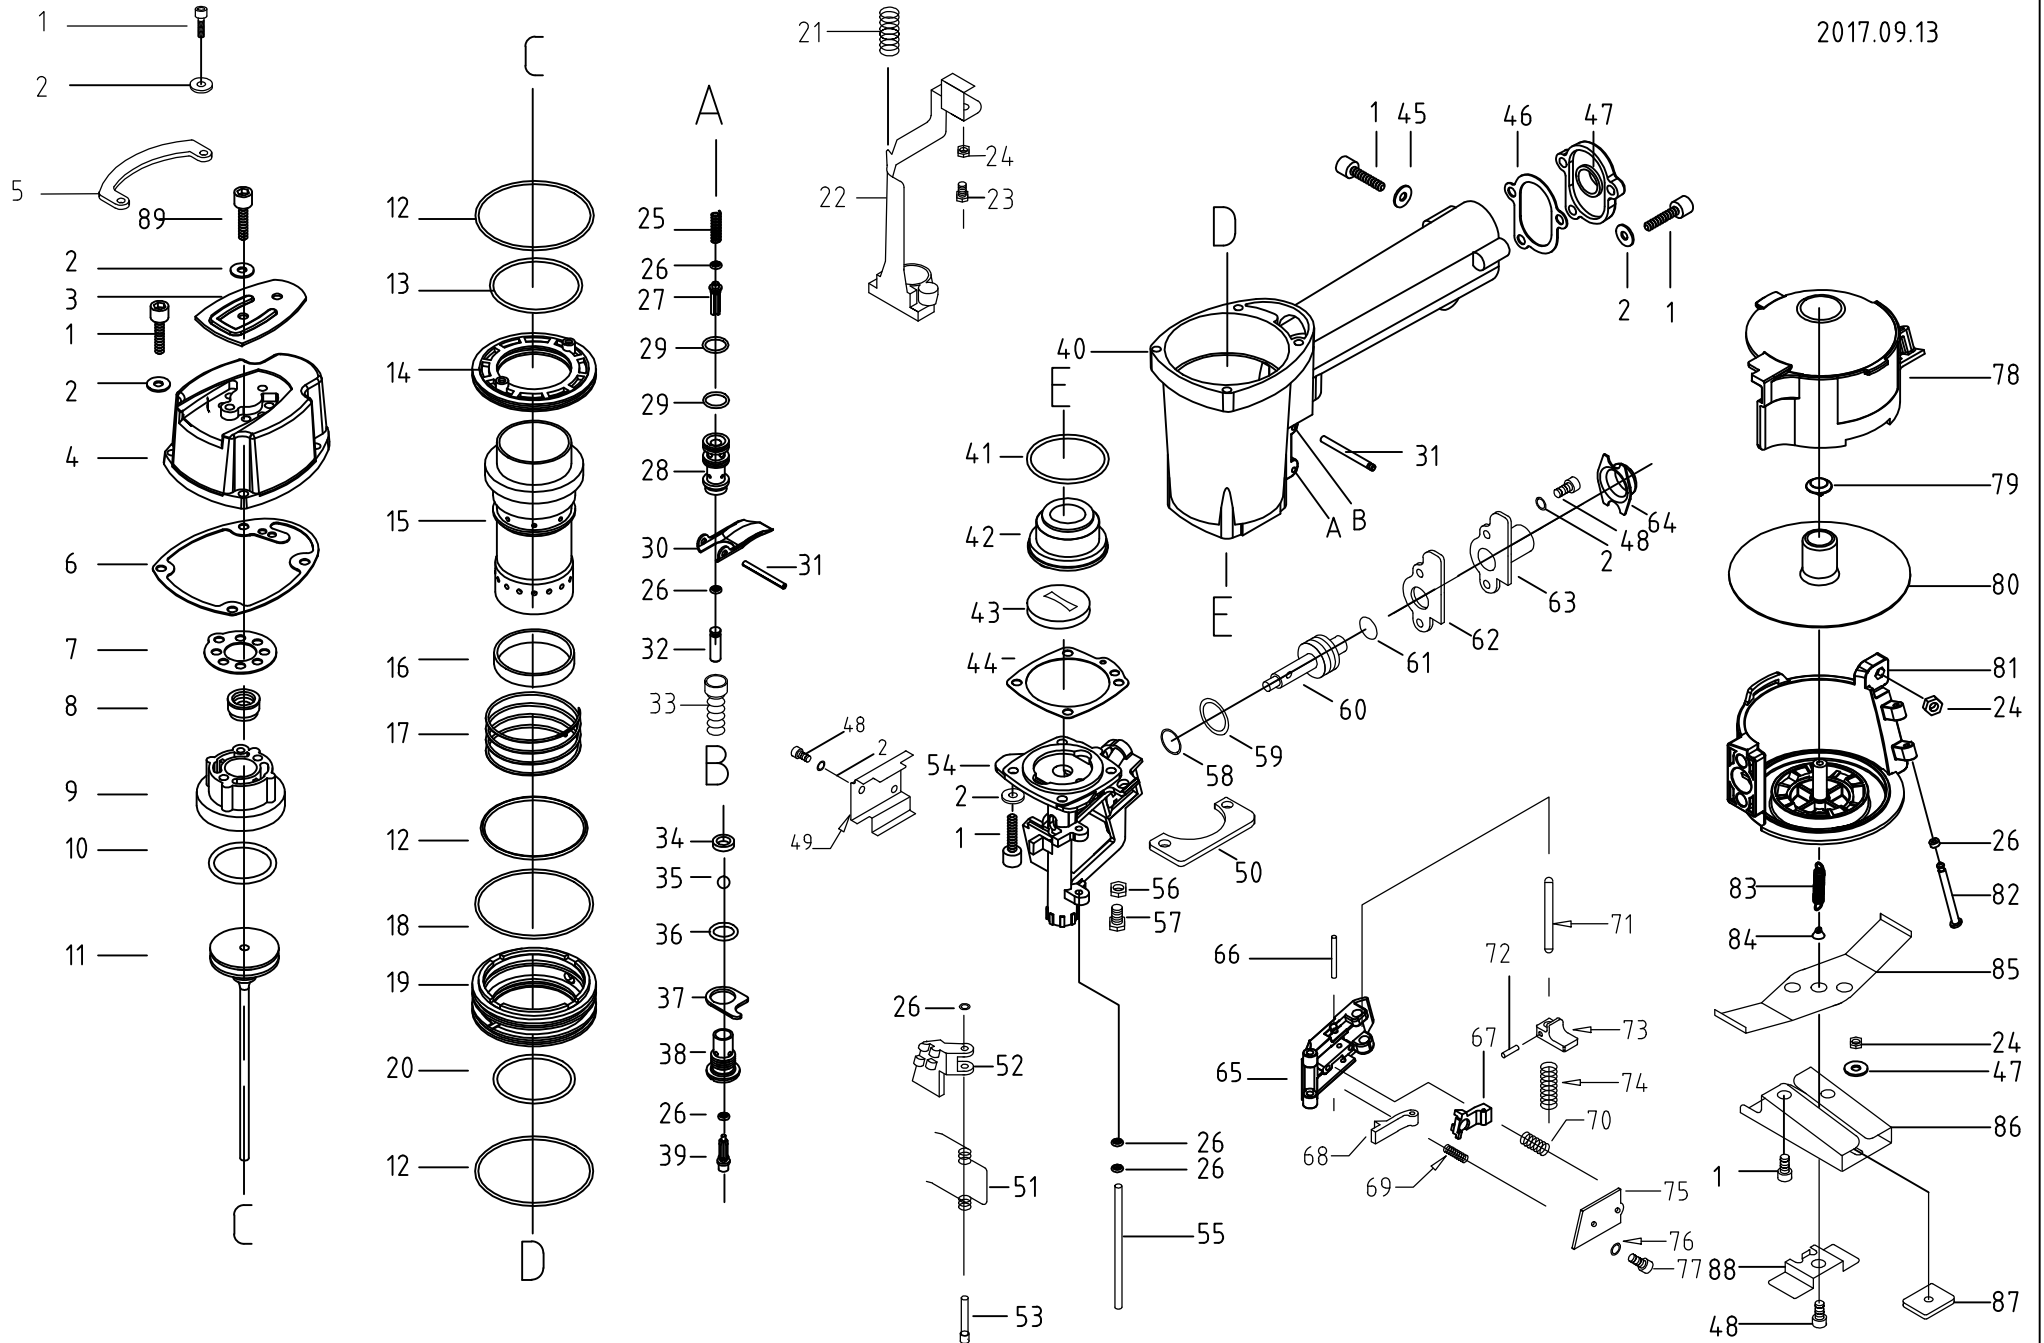

PART LIST OF NV45AB

NO.	Part No.	Description	NO.	Part No.	Description	NO.	Part No.	Description
1	CR001	Bolt	33	CR033	VALVE RUBBER COVER	65	10403006	NAIL GUIDE
2	CR002	Spring Washer	34	CR034	SEAL	66	CR066	ROLLER PIN
3	CR003	Exhaust Cover	35	CR035	VALVE BALL	67	CR067	STOPPER
4	CR004	Cap	36	CR036	O-ring	68	CR068	STOPPER
5	CR005	BODY GUARD	37	CR037	VALVE PLATE	69	CR069	Spring
6	CR006	Gasket	38	CR038	TRIGGER VALVE BUSHING	70	CR070	Spring
7	CR007	GASKET	39	CR039	TRIGGER PLUNGER	71	CR071	SHAFT
8	CR008	Exhaust Valve	40	CR040	BODY	72	CR072	ROLLER PIN
9	CR009	Stopper	41	CR041	O-ring	73	CR073	LATCH
10	CR010	O-ring	42	CR042	Bumper	74	CR074	LATCH SPRING
11	CR011	Piston Unit	43	CR043	DRIVER GUIDE	75	CR075	NAIL GUIDE COVER
12	CR012	O-ring	44	CR044	GASKET	76	CR076	WASHER
13	CR013	O-ring	45	CR045	WASHER	77	CR077	BOLT
14	CR014	Cylinder Plate	46	CR046	GASKET	78	11128007	MAGAZINE COVER
15	CR015	Cylinder	47	CR047	END CAP	79	11128005	POST CAP
16	CR016	Cylinder ring	48	CR048	BOLT	80	11128009	NAIL HOLDER
17	CR017	Cylinder spring	49	CR049	GUARD	81	11128008	MAGAZINE
18	CR018	O-ring	50	CR050	COVER GUARD	82	11128010	SHAFT
19	CR019	Cylinder GUIDE	51	CR051	SPRING	83	19916097	SPRING
20	CR020	O-ring	52	CR052	FEEDER PAWL	84	11128006	POST RETAINER
21	CR021	SPRING	53	CR053	FEEDER SHAFT	85	CR090	MAGAZINE GUARD
22	CR022	SAFETY	54	CR054	NOSE	86	CR092	GUIDE BASE
23	CR023	BOLT	55	CR055	Shaft	87	CR091	PLATE NUT
24	CR024	NUT	56	CR056	LOCK NUT	88	CR093	SHINGLE GUIDE
25	CR025	SPRING	57	CR057	BOLT	89	CR095	SCREW
26	CR026	O-ring	58	CR058	O-ring	90		
27	CR027	PLUNGER(A)	59	CR059	O-ring	91		
28	CR028	VALVE BUSHING	60	CR060	FEEDER PISTON	92		
29	CR029	O-ring	61	CR061	O-RING	93		
30	CR030	TRIGGER	62	CR062	GASKET	94		
31	CR031	SPRING PIN	63	CR063	FEEDER PISTON COVER	95		
32	CR032	PLUNGER(B)	64	CR064	MAGAZINE BUSHING	96		20200617