

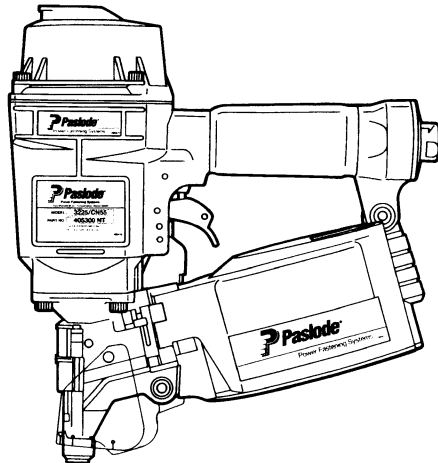


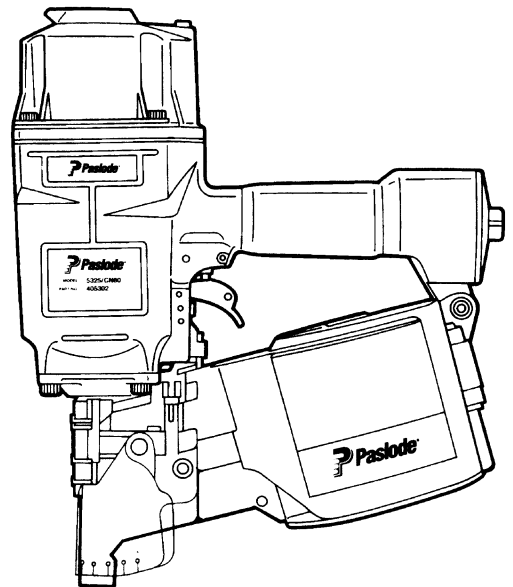


Model 3225/CN55
Model 4275/CN70
Model 5325/CN80
PNEUMATIC COIL NAILERS

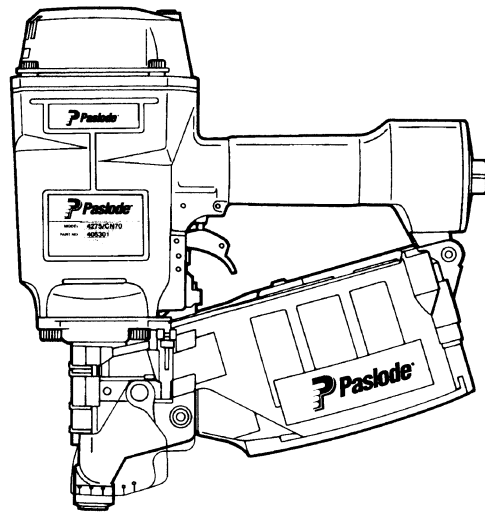

IMPORTANT
DO NOT DESTROY

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

Operating and
Maintenance Manual

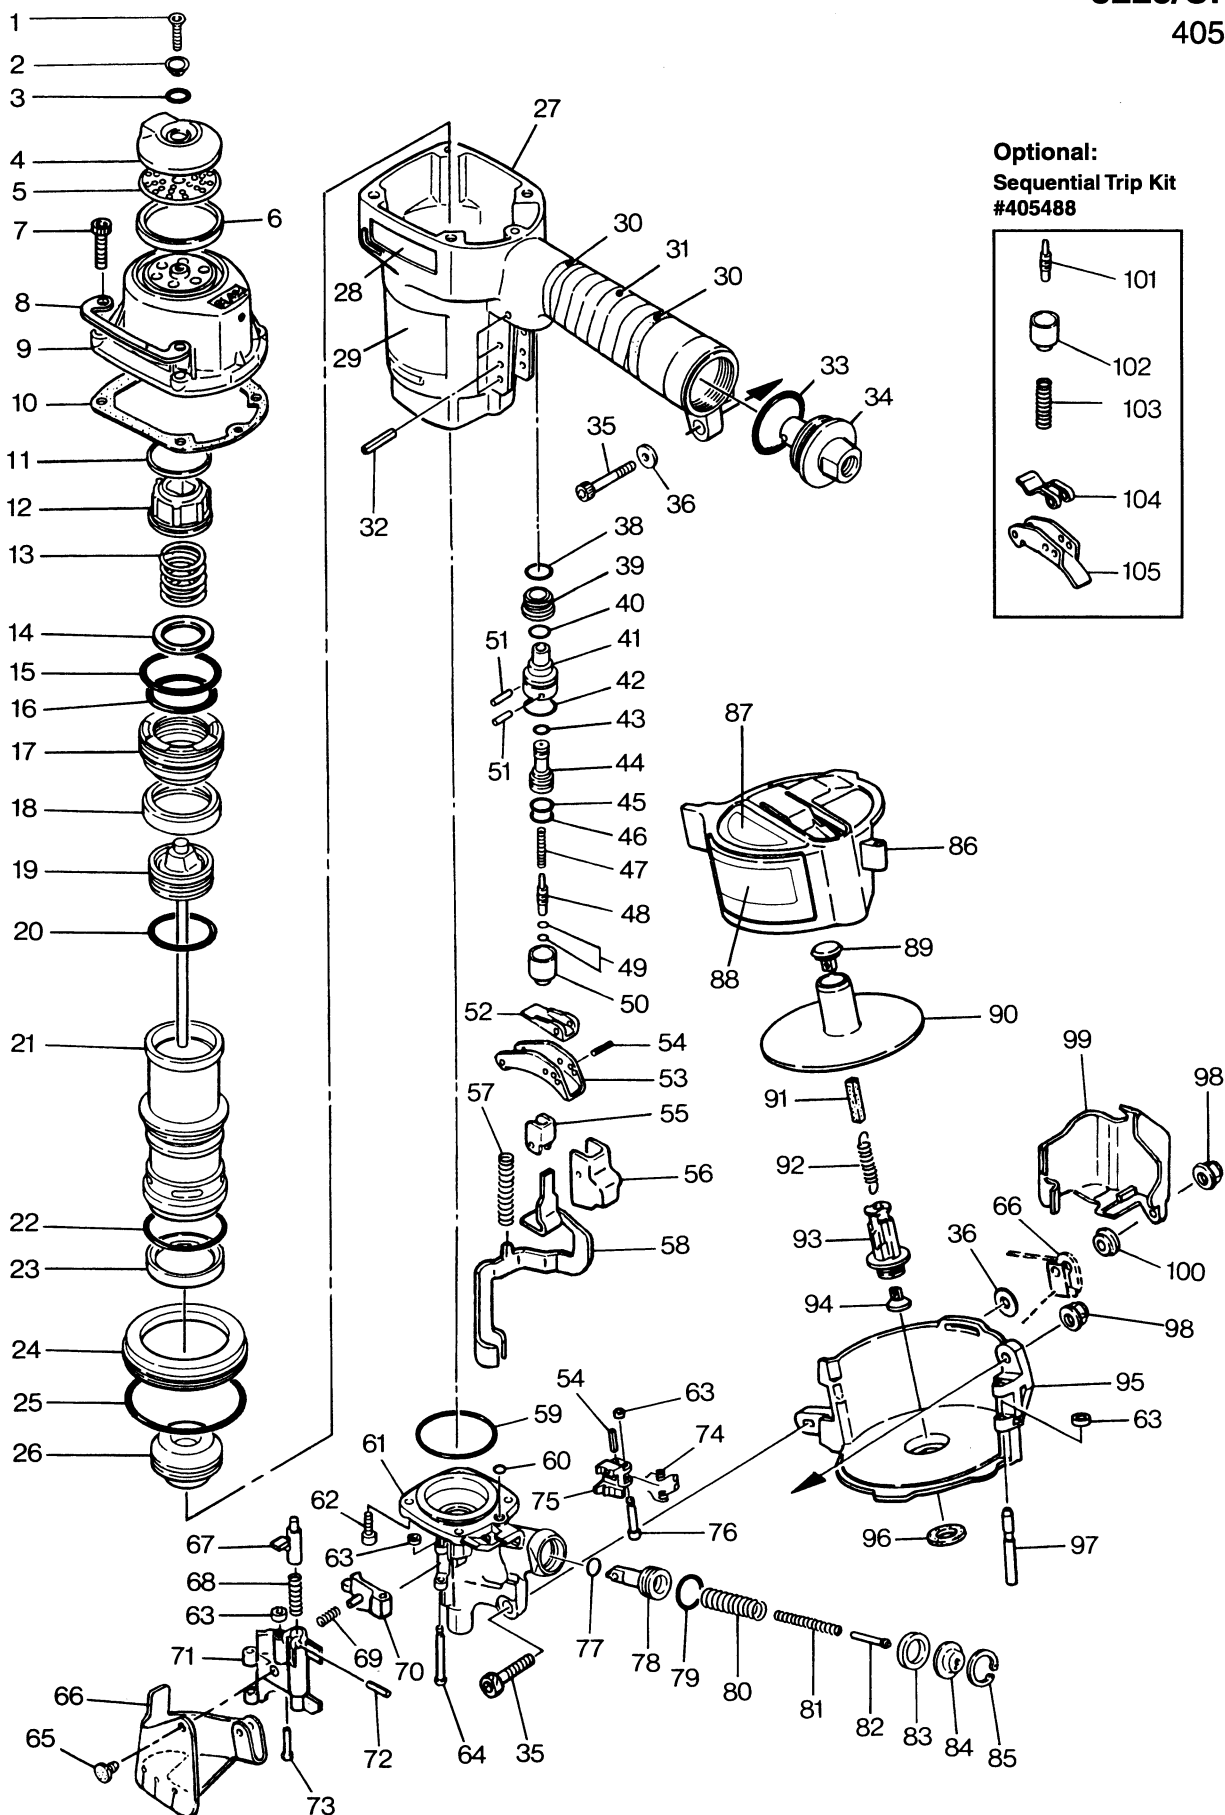

PARTS LEGEND

3225/CN55, 405300

1	405312	1	Screw M8 x 20	51	405422	1	Straight Pin 161
2	405489	1	Exhaust Cover Holder	52	405473	1	Contact Lever
* 3	405434	1	O-Ring	53	405472	1	Trigger
4	405372	1	Exhaust Cover	54	405417	1	Roll Pin 3 x 16
5	405367	1	Exhaust Filter	55	405352	1	Contact Arm Guide
6	405371	1	Exhaust Cover Seal	56	405354	1	Contact Arm Cover-B
7	405306	1	Screw M6 x 25	57	405466	1	Compression Spring 3256
8	405390	1	Protector	58	405365	1	Contact Arm Unit
9	405384	1	Cylinder Cap Unit	*59	405456	1	O-Ring
10	405457	1	Cylinder Cap Seal	*60	405449	1	O-Ring
11	405368	1	Spacer,Exhaust	61	405355	1	Nose
12	405379	1	Piston Stop	62	405304	1	Screw M6 x 22
13	405469	1	Compression Spring 3578	63	405414	1	Rubber Washer 7
14	405381	1	Head Valve Washer	64	405428	1	Step Pin 1501
*15	405438	1	O-Ring	65	405320	1	Dust Cover Hook
*16	405444	1	O-Ring	66	405363	1	Dust Cover
17	405386	1	Head Valve Piston	67	405316	1	Door Latch
18	405382	1	Cylinder Seal	68	405461	1	Compression Spring 3123
*19	405351	1	Main Piston Unit	69	405460	1	Compression Spring 3109
*20	405430	1	O-Ring	70	405362	1	Check Pawl
21	405349	1	Cylinder	71	405361	1	Door
*22	405439	1	O-Ring	72	162498	1	Roll Pin 3 x 12
23	405350	1	Check Valve	73	405429	1	Step Pin 1502
24	405323	1	Cylinder Ring	74	405470	1	Torsion Spring 3058
*25	405446	1	O-Ring	75	405356	1	Feed Pawl
*26	405366	1	Bumper	76	405425	1	Step Pin 1263
27	405383	1	Frame	*77	405455	1	O-Ring
28	405476	2	Logo Label	78	405357	1	Feed Piston
29	405478	1	Nameplate	*79	405436	1	O-Ring
30	405375	1	Grip End Tape	80	405467	1	Compression Spring 3257
31	405378	1	Grip Tape	81	405468	1	Compression Spring 3258
32	405421	1	Roll Pin 3 x 28	82	405359	1	Spring Guide
*33	405448	1	O-Ring	83	405358	1	Feed Piston Stop
34	405385	1	End Cap	84	405360	1	Spring Collar
35	405309	1	Screw M6 x 38	85	405458	1	Retaining Ring
36	405413	1	Plain Washer 138	86	405389	1	Magazine Cover
*38	405440	1	O-Ring	**87	405481	1	Warning Label
39	405364	1	Spacer	88	405475	1	Magazine Label
*40	405437	1	O-Ring	89	405370	1	Post Cap
41	405374	1	Trigger Valve Housing	90	405369	1	Nail Support
*42	405435	1	O-Ring	91	405317	1	Spacer
*43	405432	1	O-Ring	92	405459	1	Tension Spring
44	405373	1	Pilot Valve	93	405388	1	Magazine Post
*45	405442	1	O-Ring	94	405318	1	Receiver, Spring
*46	405431	1	O-Ring	95	405387	1	Magazine
47	405462	1	Compression Spring 3129	96	405415	1	Post Retainer
48	405322	1	Trigger Valve Stem	97	405424	1	Straight Pin
*49	405443	1	O-Ring	98	405314	1	Elastic Stop Nut M6 x 1
50	405321	1	Trigger Valve Cap	99	405353	1	Contact Arm Cover-A

* Denotes Normal Wear items

** Make sure Warning Label (405481) is properly affixed. Replace if necessary. Label available at no charge through the Service Parts Dept.

@ Apply Loctite 242 (Blue) Part #093500.

Parts Special to Sequential Trip Kit #405488

101	405483	1	Trigger Valve Stem
102	405484	1	Trigger Valve Cap
103	405485	1	Compression Spring 3228
104	405486	1	Contact Lever
105	405487	1	Trigger