


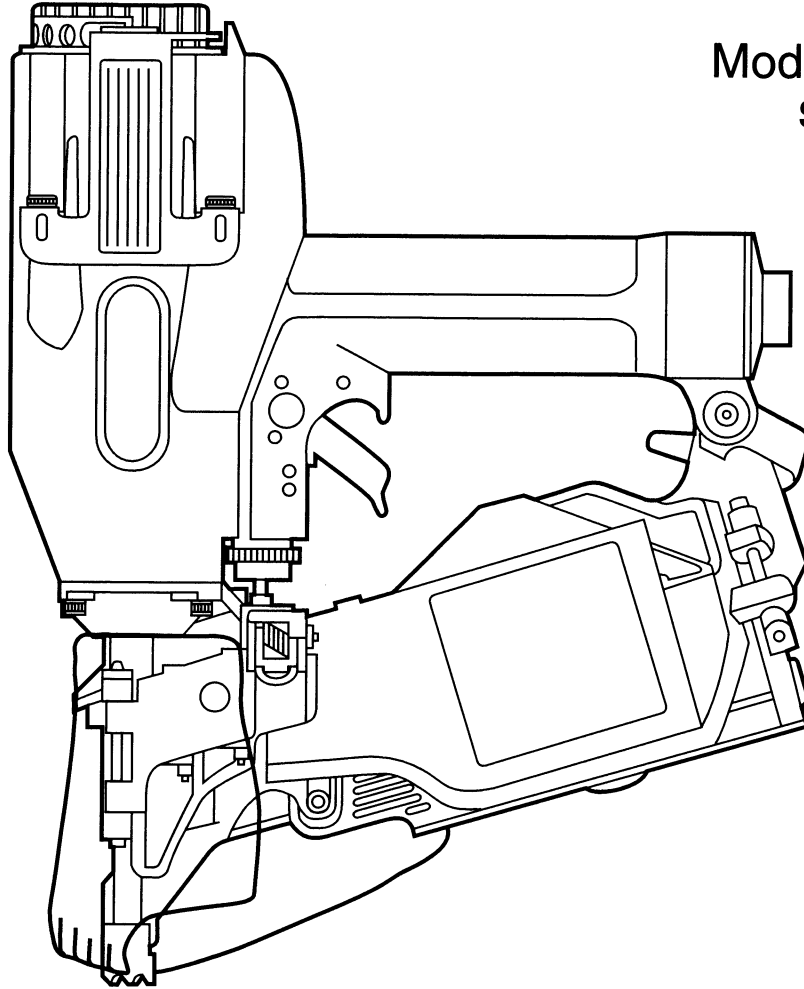

Model 3250C-HSF
Siding Coil Nailer


Operating and Maintenance Manual

IMPORTANT!
DO NOT DESTROY

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

3250C-HSF

590300

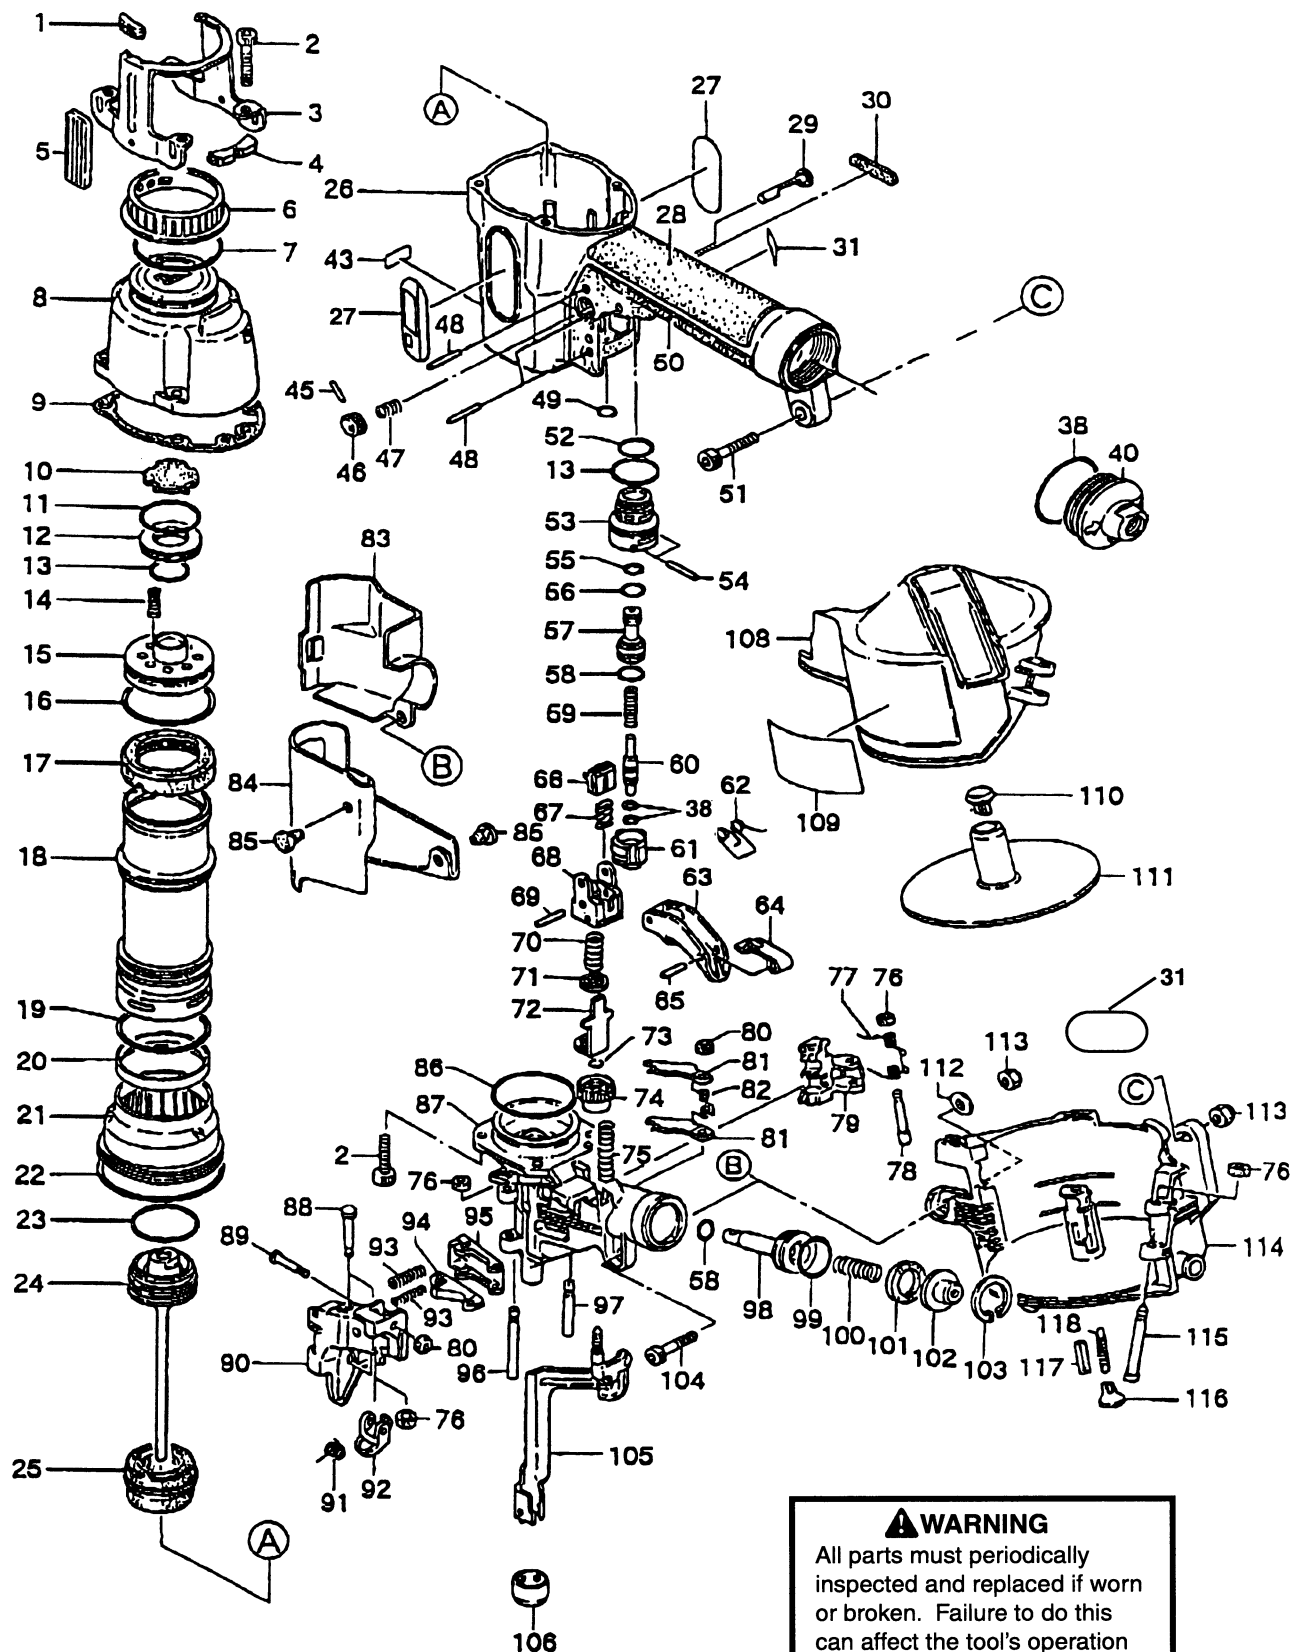

⚠ WARNING

All parts must periodically inspected and replaced if worn or broken. Failure to do this can affect the tool's operation and present a safety hazard.

Parts Legend

3250C-HSF, 590300

1	590270	1	Exhaust Cover Holder	65	590193	1	Roll Pin
2	590271	8	Screw M5 x 25	66	590195	1	Lever
3	590272	1	Protector	67	590196	1	Spring, Lever
4	590273	1	Shock Absorber	68	590197	1	Contact Arm Guide
5	590274	1	Protector Rubber	69	590198	1	Straight Pin
6	590275	1	Exhaust Cover	70	590306	1	Compression Spring
*7	590276	1	O-Ring	71	590201	1	Contact Bumper
8	590277	1	Cylinder Cap Unit	72	590202	1	Contact Arm A
9	590278	1	Cylinder Cap Seal	73	590204	1	Nut Stopper
10	590279	1	Exhaust Seal	74	590205	1	Adjust Dial
*11	590280	1	O-Ring	75	590307	1	Compression Spring
12	590281	1	Main Valve Guide	76	405414	4	Rubber Washer
*13	590163	2	O-Ring	77	590308	1	Torsion Spring
*14	590214	8	Compression Spring	78	590309	1	Step Pin
15	590282	1	Main Valve Piston	79	590310	1	Feed Claw
*16	590283	1	O-Ring	80	590311	1	Rubber Washer
17	590284	1	Cylinder Seal	81	590312	2	Hold Back Claw
18	590285	1	Cylinder	82	590313	1	Torsion Spring
*19	590286	1	O-Ring	83	590314	1	Cover
20	405350	1	Check Valve	84	590315	1	Dust Cover
21	590287	1	Cylinder Ring	85	405320	1	Dust Cover Hook
*22	590288	1	O-Ring	*86	405456	1	O-Ring
*23	590289	1	O-Ring	87	590316	1	Nose
*24	590290	1	Main Piston Assembly	88	590317	1	Step Pin
*25	590291	1	Bumper	89	590318	1	Step Pin
26	590292	1	Housing	90	590319	1	Door
27	590293	2	Label, Logo Housing	91	590320	1	Torsion Spring
28	590294	1	Grip Cover A	92	590321	1	Door Latch
29	590172	1	Trigger Lock Lever	93	590322	2	Compression Spring
30	590295	1	Protector	94	590323	1	Hold Back Plastic B
**31	500458	1	Warning Label	95	590324	1	Hold Back Plastic A
*38	405448	1	O-Ring	96	590325	1	Straight Pin
40	590296	1	End Cap	97	590326	1	Straight Pin
43	590297	1	Label, Plastic Sheet	98	590327	1	Feed Piston
45	590298	1	Roll Pin	*99	590219	1	O-Ring
46	590299	1	Trigger Lock Dial	100	590328	1	Compression Spring
47	590173	1	Compression Spring	101	590220	1	Feed Piston Stop
48	590301	2	Roll Pin	102	590222	1	Spring Collar
*49	590302	1	O-Ring	103	590223	1	Retaining Ring
50	590303	1	Grip Cover B	104	590329	1	Screw M5 x 20
51	590304	1	Screw M5 x 25	105	590330	1	Contact Arm B Unit
*52	590181	1	O-Ring	*106	590331	1	Contact Tip
53	590182	1	Trigger Valve Housing	108	590332	1	Magazine Cover
54	590194	2	Straight Pin	109	590333	1	Nameplate
*55	590183	1	O-Ring	110	405370	1	Post Cap
*56	590184	1	O-Ring	111	590334	1	Nail Support
57	405373	1	Pilot Valve	112	590335	1	Plain Washer
*58	590186	2	O-Ring	113	590336	1	Elastic Stop Nut M5
59	590187	1	Compression Spring	114	590337	1	Magazine
60	590189	1	Trigger Valve Stem	115	405427	1	Step Pin
61	590190	1	Trigger Valve Cap	116	405318	1	Receiver Spring
62	590176	1	Torsion Spring	117	405317	1	Spacer
63	590305	1	Trigger	118	590237	1	Tension Spring
64	590191	1	Contact Lever				

* Denotes normal wear items.

** Note: Make sure Warning Label(500458) is properly affixed. Replace if necessary. Label available at no charge through Service Department.