



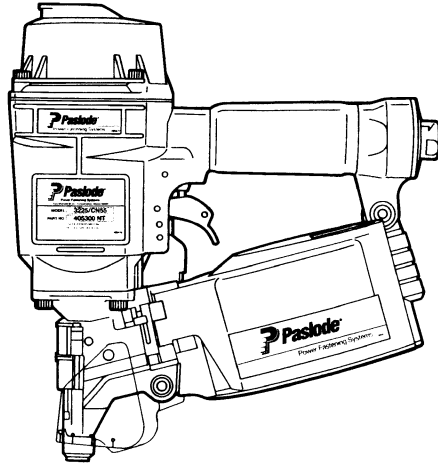


Model 3225/CN55

Model 4275/CN70

Model 5325/CN80


PNEUMATIC COIL NAILERS

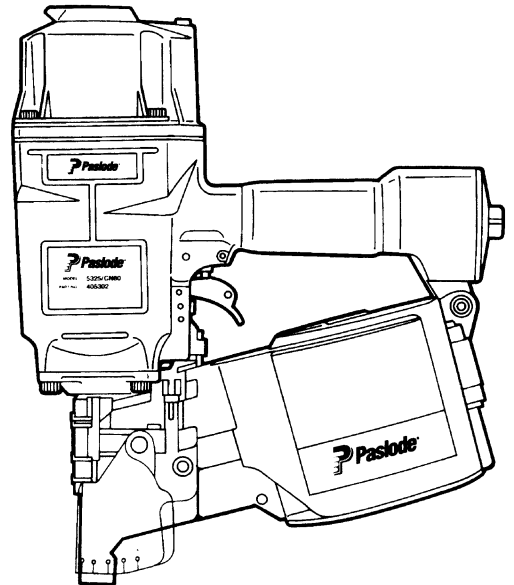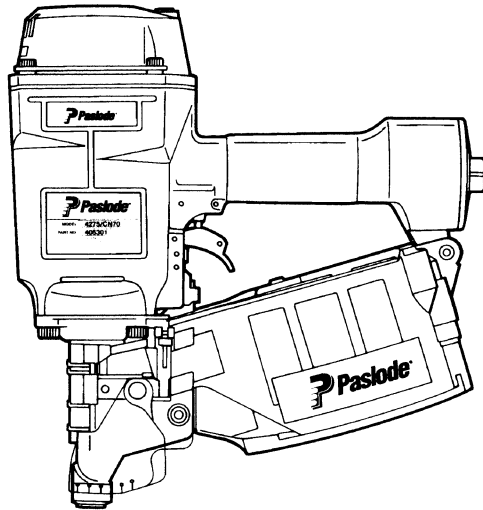

**IMPORTANT
DO NOT DESTROY**

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**Operating and
Maintenance Manual**

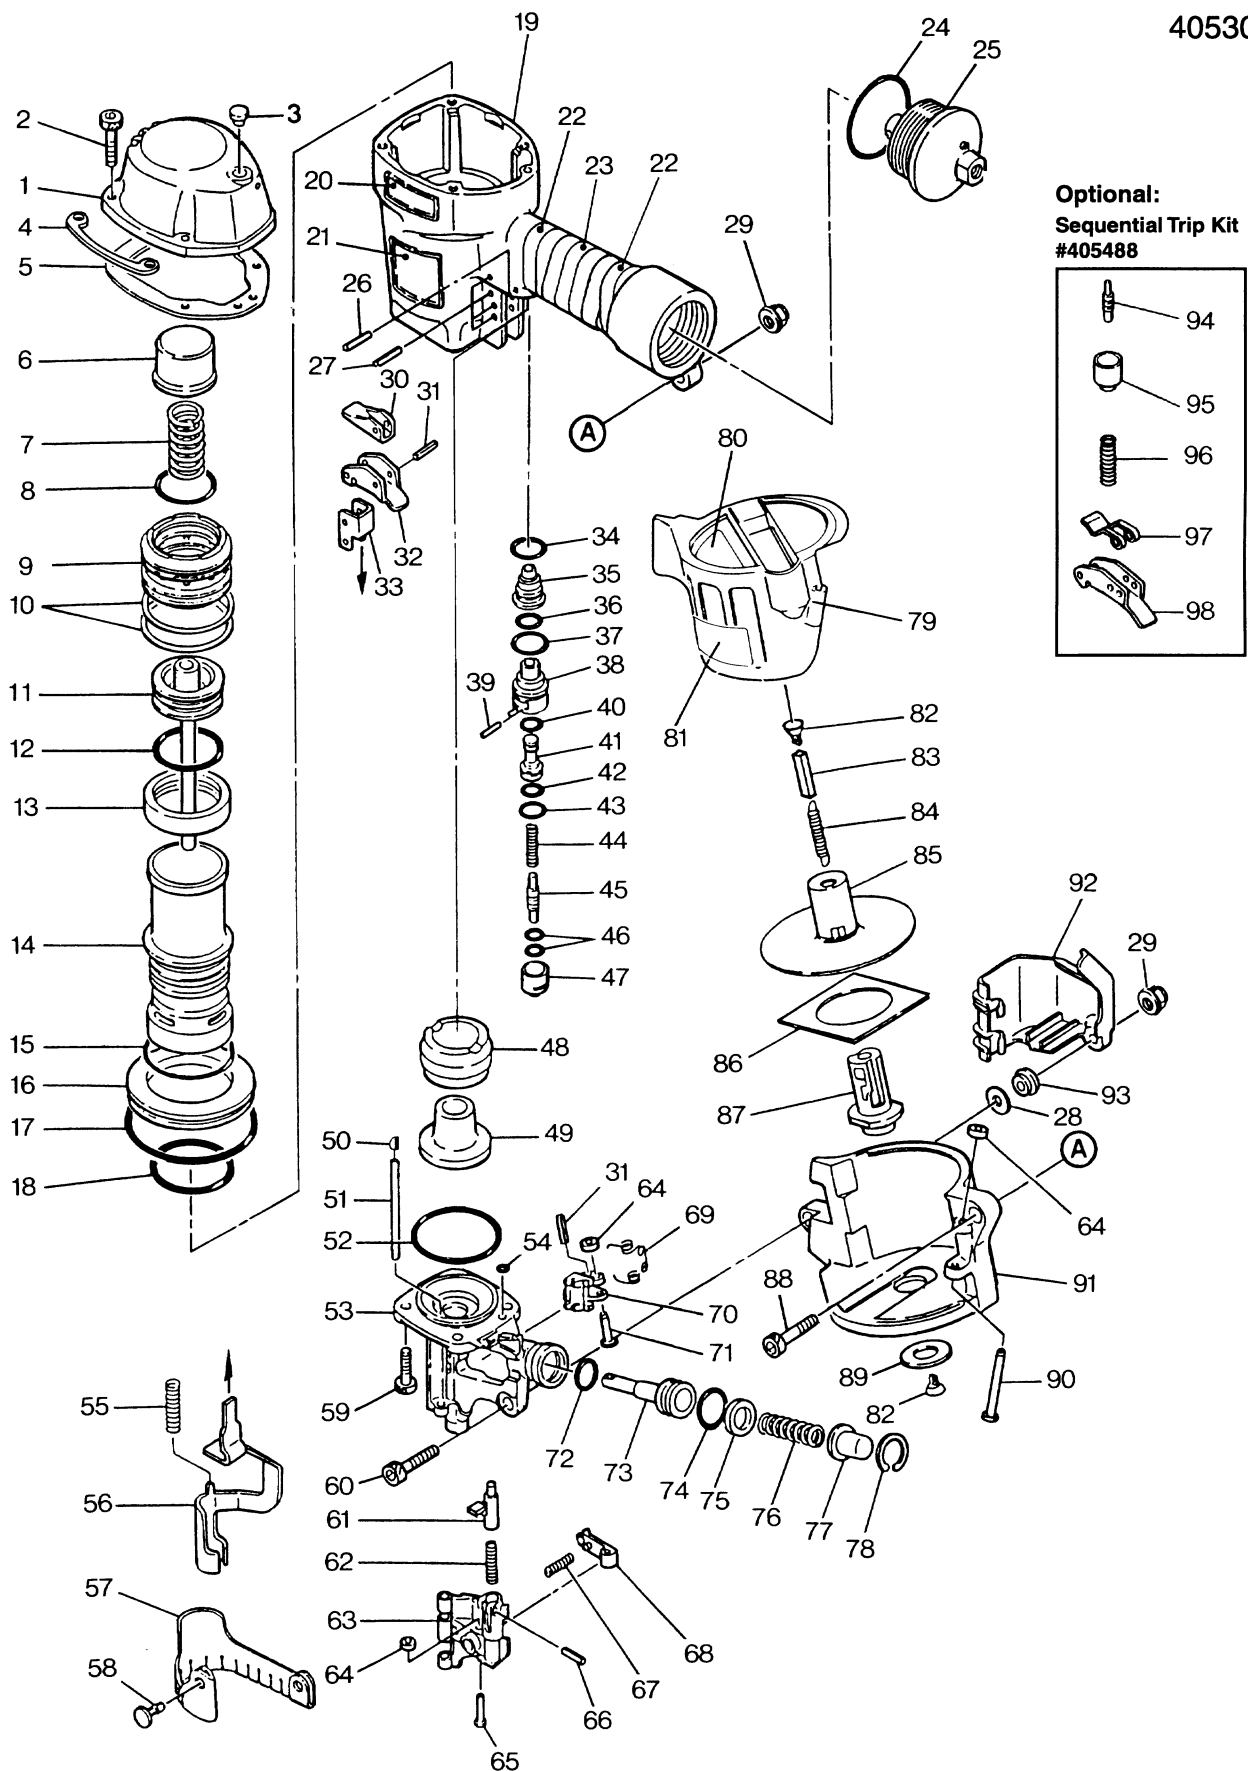

PARTS LEGEND

4275/CN70, 405301

1	405391	1	Cylinder Cap	47	405321	1	Trigger Valve Cap
2	405305	1	Screw M6 x 30	48	005328	1	Bumper "A"
3	005474	1	Grommet	49	405329	1	Bumper "B"
4	405410	1	Protector	50	405342	1	Pin Cap
5	405324	1	Cylinder Cap Seal	* 51	405423	1	Straight Pin 1127
6	405325	1	Piston Stop	* 52	405450	1	O-Ring
7	405463	1	Compression Spring 3195	53	405380	1	Nose
* 8	405451	1	O-Ring	* 54	405449	1	O-Ring
9	405348	1	Head Valve Piston	55	405464	1	Compression Spring 3223
* 10	405453	1	O-Ring	56	405347	1	Contact Arm Unit
* 11	405343	1	Main Piston Unit	57	405340	1	Dust Cover
* 12	405454	1	O-Ring	58	405320	1	Dust Cover Hook
13	405327	1	Cylinder Seal	59	405307	1	Screw M8 x 28
14	405345	1	Cylinder	60	405309	1	Screw M6 x 38
* 15	405452	1	O-Ring	61	405316	1	Door Latch
16	405326	1	Cylinder Ring	62	405461	1	Compression Spring 3123
* 17	405447	1	O-Ring	63	405393	1	Door
* 18	405441	1	O-Ring	64	405414	1	Rubber Washer 7
19	405394	1	Frame	65	405426	1	Step Pin 1286
20	405477	1	Logo Label	66	162948	1	Roll Pin 3 x 12
21	405479	1	Nameplate	67	405460	1	Compression Spring
22	405375	1	Grip End Tape	68	405315	1	Check Pawl
23	405378	1	Grip Tape	69	405470	1	Torsion Spring 3058
* 24	405445	1	O-Ring	70	405331	1	Feed Pawl
25	405406	1	End Cap	71	405425	1	Step Pin 1263
26	400828	1	Roll Pin 3 x 20	* 72	405434	1	O-Ring
27	405421	1	Roll Pin 3 x 28	73	405332	1	Feed Piston
28	405413	1	Plain Washer 138	* 74	405436	1	O-Ring
29	405314	1	Elastic Stop Nut M6 x 1	75	405333	1	Feed Piston Stop
30	405473	1	Contact Lever	76	405465	1	Compression Spring 3225
31	405417	1	Roll Pin 3 x 16	77	405334	1	Spring Collar
32	405472	1	Trigger	78	405458	1	Retaining Ring
33	405344	1	Contact Arm Guide	79	405339	1	Magazine Cover
* 34	405440	1	O-Ring	**80	405481	1	Warning Label
35	405346	1	Trigger Valve Cage	81	405475	1	Magazine Label
* 36	405437	1	O-Ring	82	405318	1	Receiver, Spring
* 37	405435	1	O-Ring	83	405317	1	Spacer
38	405374	1	Trigger Valve Housing	84	405459	1	Tension Spring 3144
39	405422	1	Straight Pin 161	85	405336	1	Nail Support Unit
40	405432	1	O-Ring	86	405337	1	Rubber Plate
41	405373	1	Pilot Valve	87	405338	1	Magazine Post
* 42	405442	1	O-Ring	88	405310	1	Screw M6 x 35
* 43	405431	1	O-Ring	89	405416	1	Post Retainer
44	405462	1	Compression Spring	90	005427	1	Step Pin 1287
45	405322	1	Trigger Valve Stem	91	405392	1	Magazine
* 46	405443	1	O-Ring	92	405330	1	Contact Arm Cover

* Denotes Normal Wear items

** Make sure Warning Label (405481) is properly affixed. Replace if necessary. Label available at no charge through the Service Parts Dept.

@ Apply Loctite 242 (Blue) Part #093500.

Parts Special to Sequential Trip Kit #405488

94	405483	1	Trigger Valve Stem
95	405484	1	Trigger Valve Cap
96	405485	1	Compression Spring 3228
97	405486	1	Contact Lever
98	405487	1	Trigger