



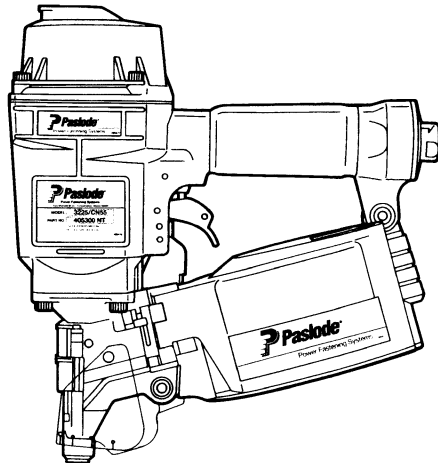


Model 3225/CN55

Model 4275/CN70

Model 5325/CN80


PNEUMATIC COIL NAILERS

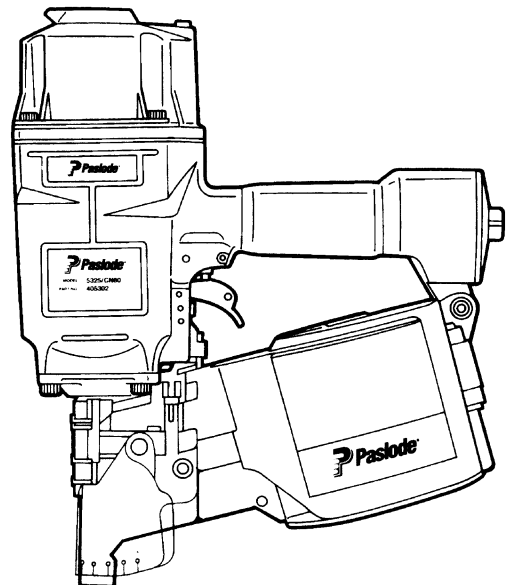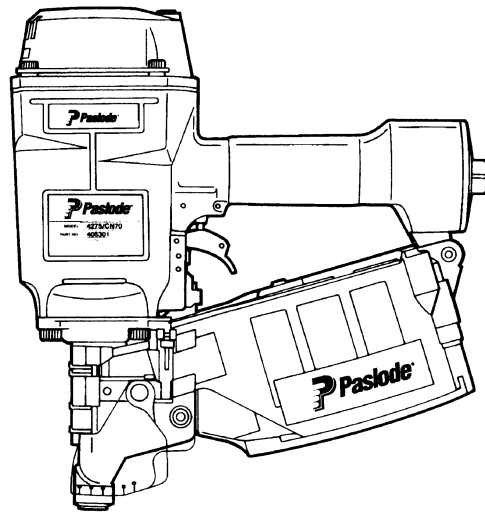

**IMPORTANT
DO NOT DESTROY**

It is the customer's responsibility to have all operators and service personnel read and understand this manual.

**Operating and
Maintenance Manual**

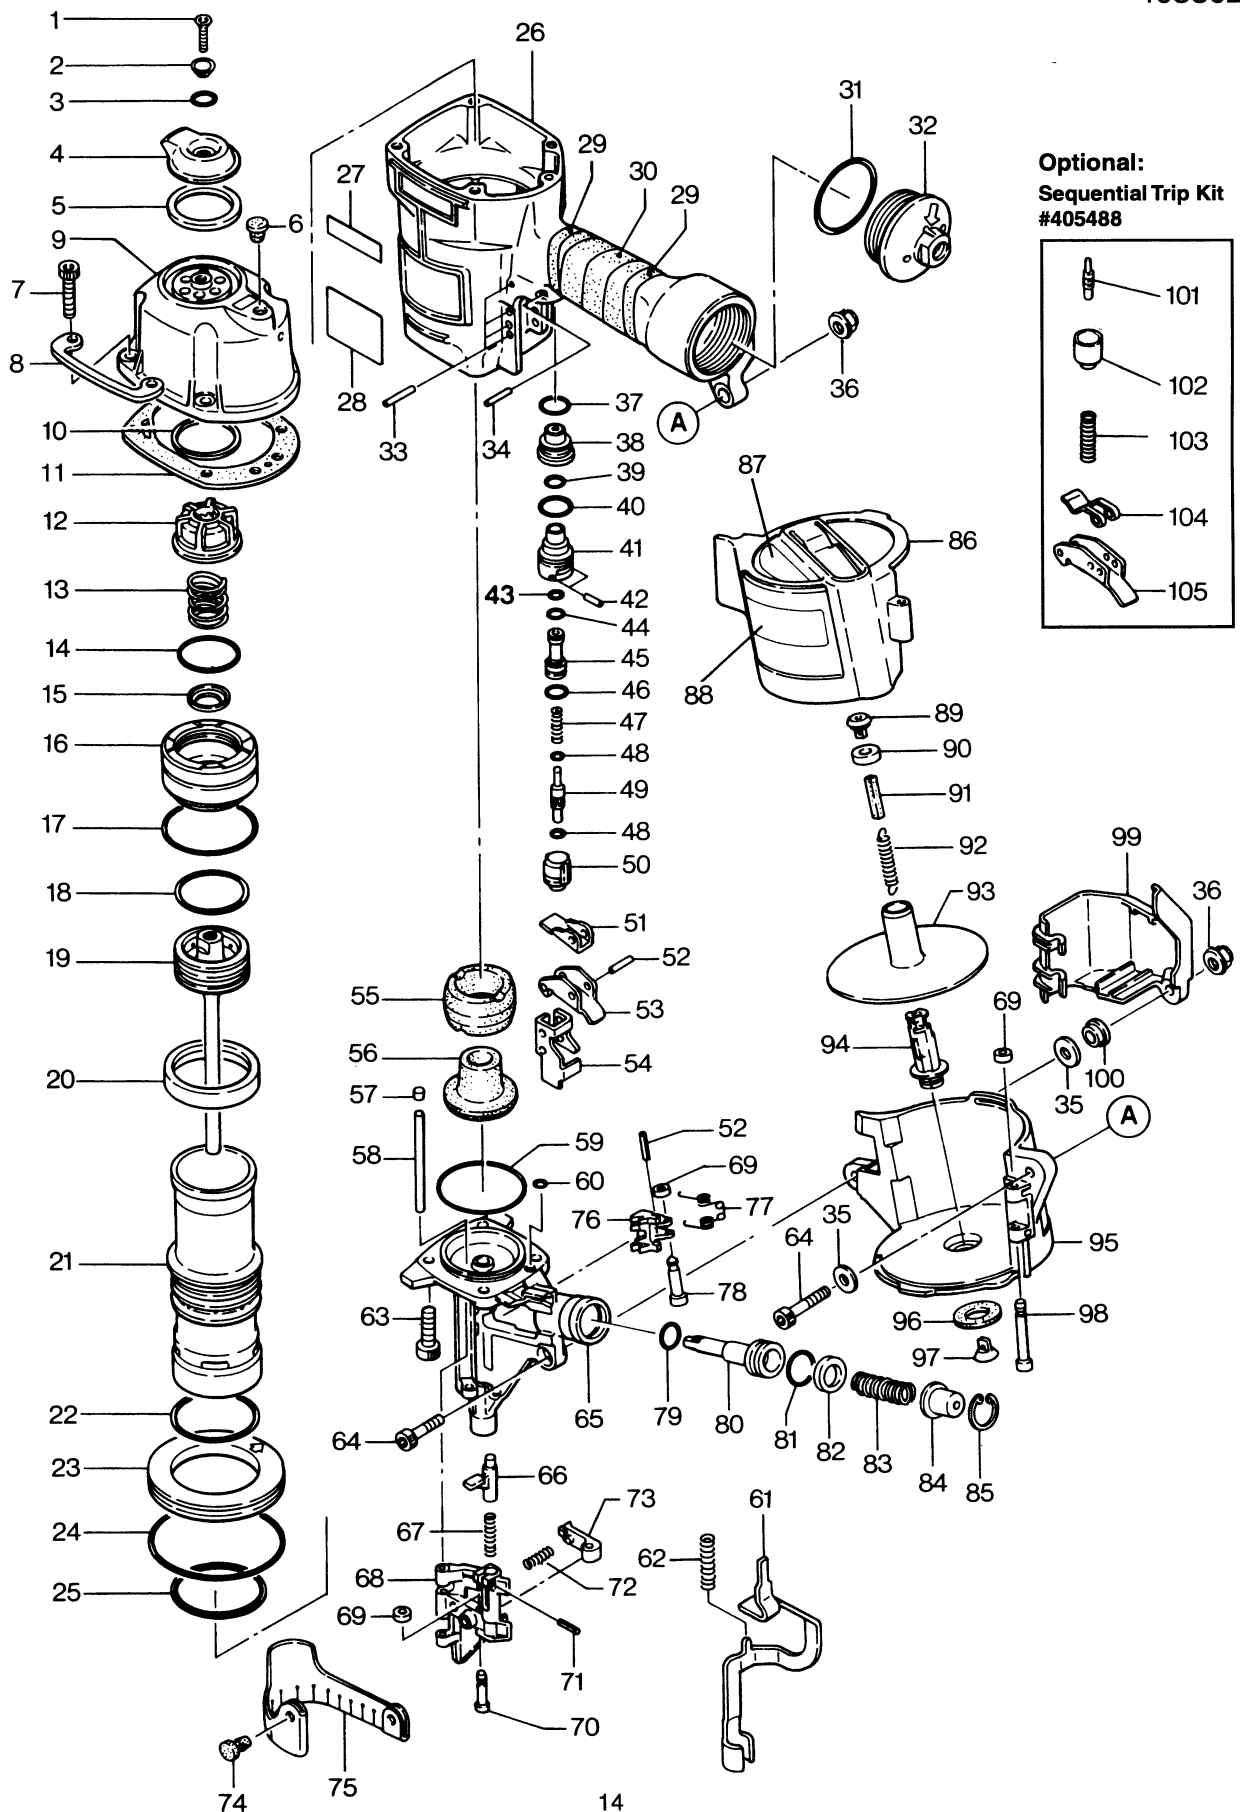

PARTS LEGEND

5325/CN80, 405302

1	405312	1	Screw M8 x 20	51	405473	1	Contact Lever
2	405489	1	Exhaust Cover Holder	52	405417	1	Roll Pin 3 x 16
* 3	405434	1	O-Ring 1AP10A	53	405472	1	Trigger
4	405376	1	Exhaust Cover	54	405344	1	Contact Arm Guide
5	405371	1	Exhaust Cover Seal	55	405328	1	Bumper "A"
6	405474	1	Grommet	56	405329	1	Bumper "B"
7	405305	1	Screw M6 x 30	57	405342	1	Pin Cap
8	405410	1	Protector	58	405423	1	Straight Pin 1127
9	405395	1	Cylinder Cap Unit	*59	405450	1	O-Ring 1 A 1.5 x 53.5
10	405408	1	Spacer, Exhaust	*60	405449	1	O-Ring 1 A 1.6 x 4.2
11	405324	1	Cylinder Cap Seal	61	405405	1	Contact Arm
12	405396	1	Piston Stop	62	405464	1	Compression Spring 3223
*13	405463	1	Compression Spring-3195	63	405308	1	Screw M8 x 30
*14	405451	1	O-Ring 1 A 3 x 41.6	64	405311	1	Screw M6 x 40
15	405404	1	Head Valve Washer	65	405398	1	Nose
16	405409	1	Head Valve Piston	66	405316	1	Door Latch
*17	405453	1	O-Ring 1 A 3 x 56.8	67	405461	1	Compression Spring 3123
*18	405454	1	O-Ring 1 A 4.9 x 43	68	405401	1	Door
*19	405397	1	Main Piston Unit	69	405414	1	Rubber Washer 7
20	405327	1	Cylinder Seal	70	405426	1	Step Pin 1286
21	405471	1	Cylinder	71	162498	1	Roll Pin 3 x 12
*22	405452	1	O-Ring 1A 3.1 x 56.5	72	405460	1	Compression Spring 3109
23	405326	1	Cylinder Ring	73	405315	1	Check Pawl
*24	405447	1	O-Ring 1AG85	74	405320	1	Dust Cover Hook
*25	405441	1	O-Ring 1AP56	75	405407	1	Dust Cover
26	405394	1	Frame	76	405399	1	Feed Pawl
27	405477	2	Logo Label	77	405470	1	Torsion Spring 3058
28	405480	1	Nameplate	78	405425	1	Step Pin 1263
29	405375	1	Grip End Tape	*79	405433	1	O-Ring 1AP10
30	405378	1	Grip Tape	80	405400	1	Feed Piston
31	405445	1	O-Ring 1AG50	81	405436	1	O-Ring 1AP21
32	405406	1	End Cap	82	405333	1	Feed Piston Stop
33	405421	1	Roll Pin 3 x 28	83	405465	1	Compression Spring 3225
34	400828	1	Roll Pin 3 x 20	84	405334	1	Spring Collar
35	405413	1	Plain Washer 138	85	405458	1	Retaining Ring C26
36	405314	1	Elastic Stop Nut M6 x 1	86	405403	1	Magazine Cover
*37	405440	1	O-Ring ARP568-016	87	405481	1	Warning Label
38	405346	1	Trigger Valve Cage	**88	405475	1	Magazine Label
*39	405437	1	O-Ring ARP568-013	89	405370	1	Post Cap
*40	405435	1	O-Ring 1AP20	90	405411	1	Nail Support Spacer
41	405374	1	Trigger Valve Housing	91	405317	1	Spacer
42	405422	1	Straight Pin 161	92	405459	1	Tension Spring 3144
43	405432	1	O-Ring 1AP6	93	405377	1	Nail Support
44	405442	1	O-Ring 1BP7	94	405388	1	Magazine Post
45	405373	1	Pilot Valve	95	405402	1	Magazine
*46	405431	1	O-Ring 1AP9	96	405415	1	Post Retainer
47	405462	1	Compression Spring 3129	97	405318	1	Receiver, Spring
*48	405443	1	O-Ring 1 B 1.4 x 2.5	98	405427	1	Step Pin 1287
49	405322	1	Trigger Valve Stem	99	405330	1	Contact Arm Cover
50	405321	1	Trigger Valve Cap	100	405319	1	Collar

* Denotes Normal Wear items

** Make sure Warning Label (405481) is properly affixed. Replace if necessary. Label available at no charge through the Service Parts Dept.

@ Apply Loctite 242 (Blue) Part #093500.

Parts Special to Sequential Trip Kit #405488

101	405483	1	Trigger Valve Stem
102	405484	1	Trigger Valve Cap
103	405485	1	Compression Spring 3228
104	405486	1	Contact Lever
105	405487	1	Trigger