


MODEL NTD90

SPOTNAILS®
DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd.
Rolling Meadows, IL 60008
Phone: 847-259-1620

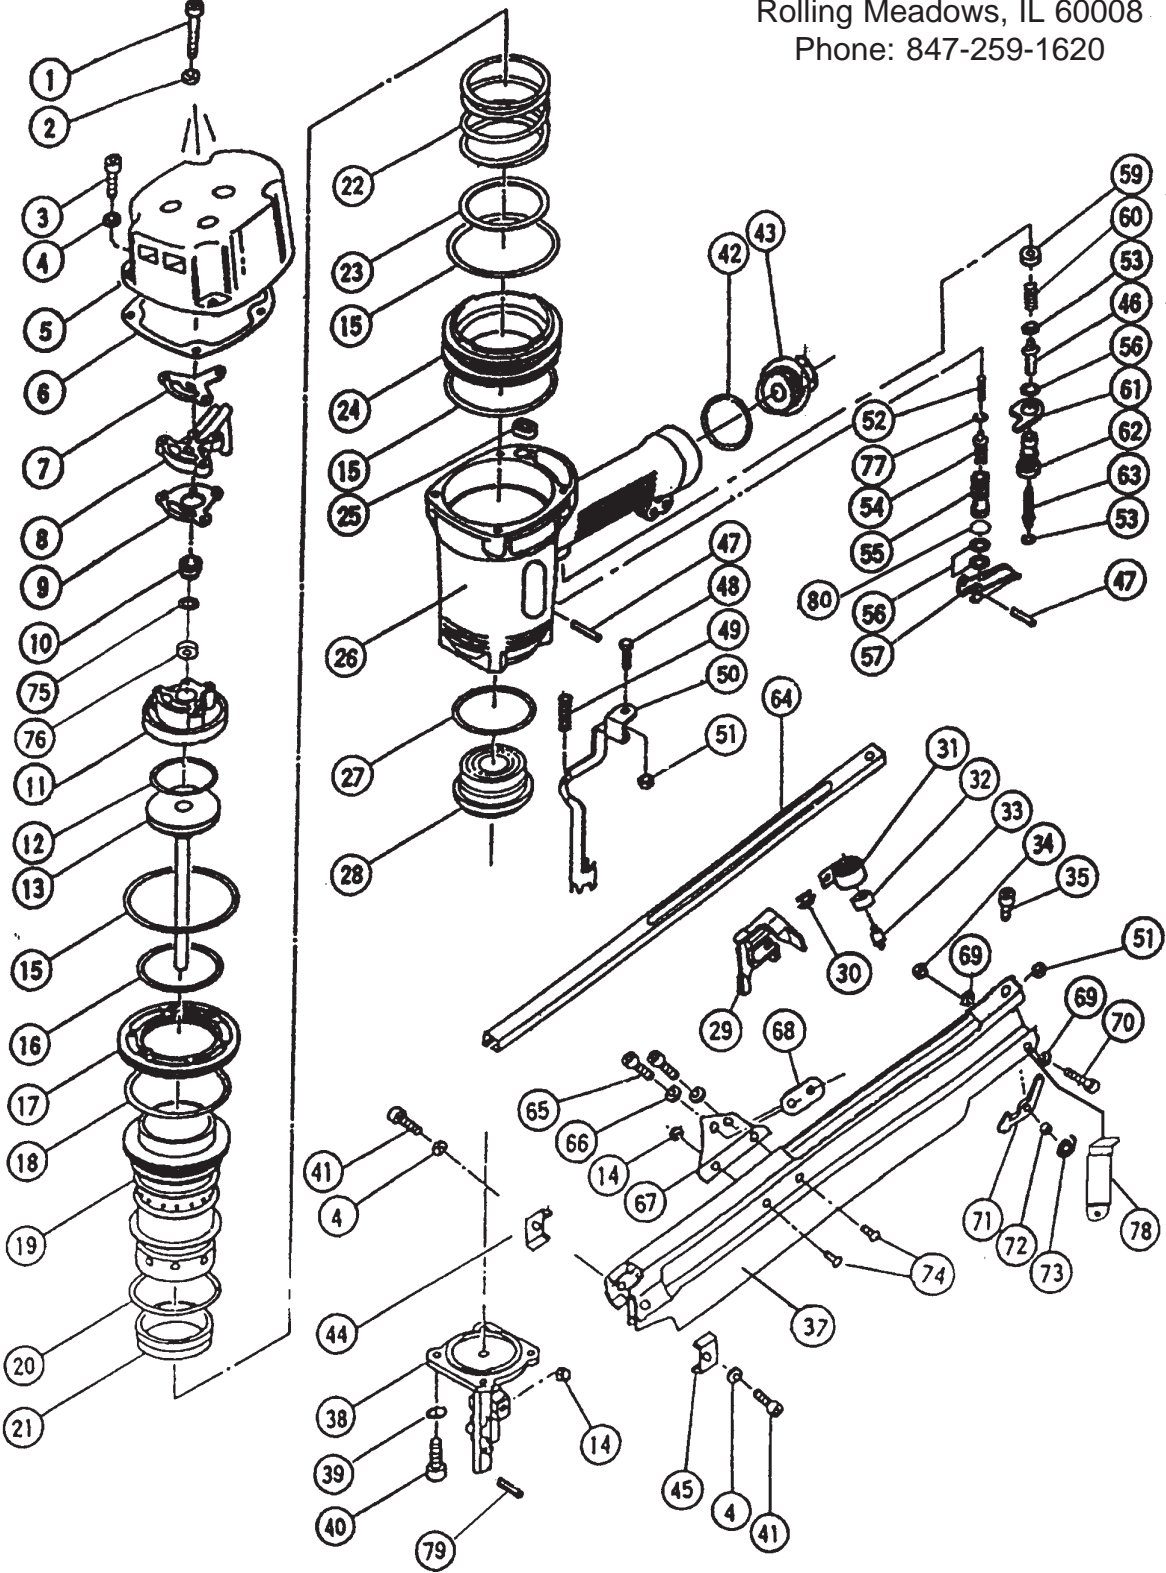

MODEL NTD90

Ref. No.	Part No.	Description
1	P-24382	Screw
2	P-32168	Washer
3	P-24314	Socket head Cap Screw
4	P-32169	Washer
5	P-60155	Cap
6	P-62061	Cap Gasket
7	P-62062	Poppet Gasket
8	P-22136	Exhaust Manifold
9	P-62063	Poppet Gasket
10	P-22135	Exhaust Valve
11	P-63034	Poppet Valve
12	P-64305	Piston O-Ring
13	AS-66130	Driver Assembly
14	P-26143	Lock Nut
15	P-64306	O-Ring
16	P-64307	O-Ring
17	P-05085	Cylinder Spacer
18	P-64308	O-Ring
19	P-05086	Cylinder
20	P-64309	O-Ring
21	P-64310	Rubber Band
22	P-18281	Cylinder Spring
23	P-05087	Spacer Ring
24	P-05088	Cylinder Spacer
25	P-15155	Poppet Stem Seal
26	P-01252	Body
27	P-64311	O-Ring
28	P-15153	Bumper
29	P-09171	Pusher
30	P-07281	Neg. Spring Pin
31	P-18285	Neg. Spring
32	P-20032	Neg. Spring Drum
33	P-07282	Neg. Spring Pin
34	P-26144	Lock Nut
35	P-24388	Socket head Cap Screw
37	P-12380	Magazine
38	P-08453	Nose
39	P-32174	Washer
40	P-24384	Socket head Cap Screw

Ref. No.	Part No.	Description
41	P-24383	Socket head Cap Screw
42	P-64312	O-Ring
43	P-60156	End Cap
44	P-13058	Nose Bracket Right
45	P-13059	Nose Bracket Left
46	P-22134	Short Plunger
47	P-07280	Trigger & Safety Pin
48	P-24347	Hex Bolt
49	P-18282	Safety Spring
50	P-53146	Safety
51	P-26126	Lock Nut
52	P-18284	Valve Spring
53	P-64313	O-Ring
54	P-22152	Long Plunger
55	P-22153	Valve
56	P-64314	O-Ring
57	P-21079	Trigger
59	P-15156	Valve Seal
60	P-18283	Valve Spring
61	P-13054	Valve Bracket
62	P-22138	Valve
63	P-22132	Medium Plunger
64	P-27178	Wear Insert
65	P-24385	Socket Head Cap Screw
66	P-32170	Washer
67	P-13059	Bracket
68	P-26145	Nut Plate
69	P-32171	Washer
70	P-24387	Socket Head Cap Screw
71	P-04059	Pusher Latch
72	P-03057	Spacer
73	P-18286	Latch Spring
74	P-24386	Button Head Cap Screw
75	P-64304	O-Ring
76	P-15154	Exhaust Seal
77	P-64317	Trigger Plunger O-Ring
78	P-13057	Rear Guard Bracket
79	P-07297	Nose Pin
80	P-64356	O-Ring