


MODEL TB1840

SPOTNAILS®

DIVISION OF PEACE INDUSTRIES, LTD.

1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

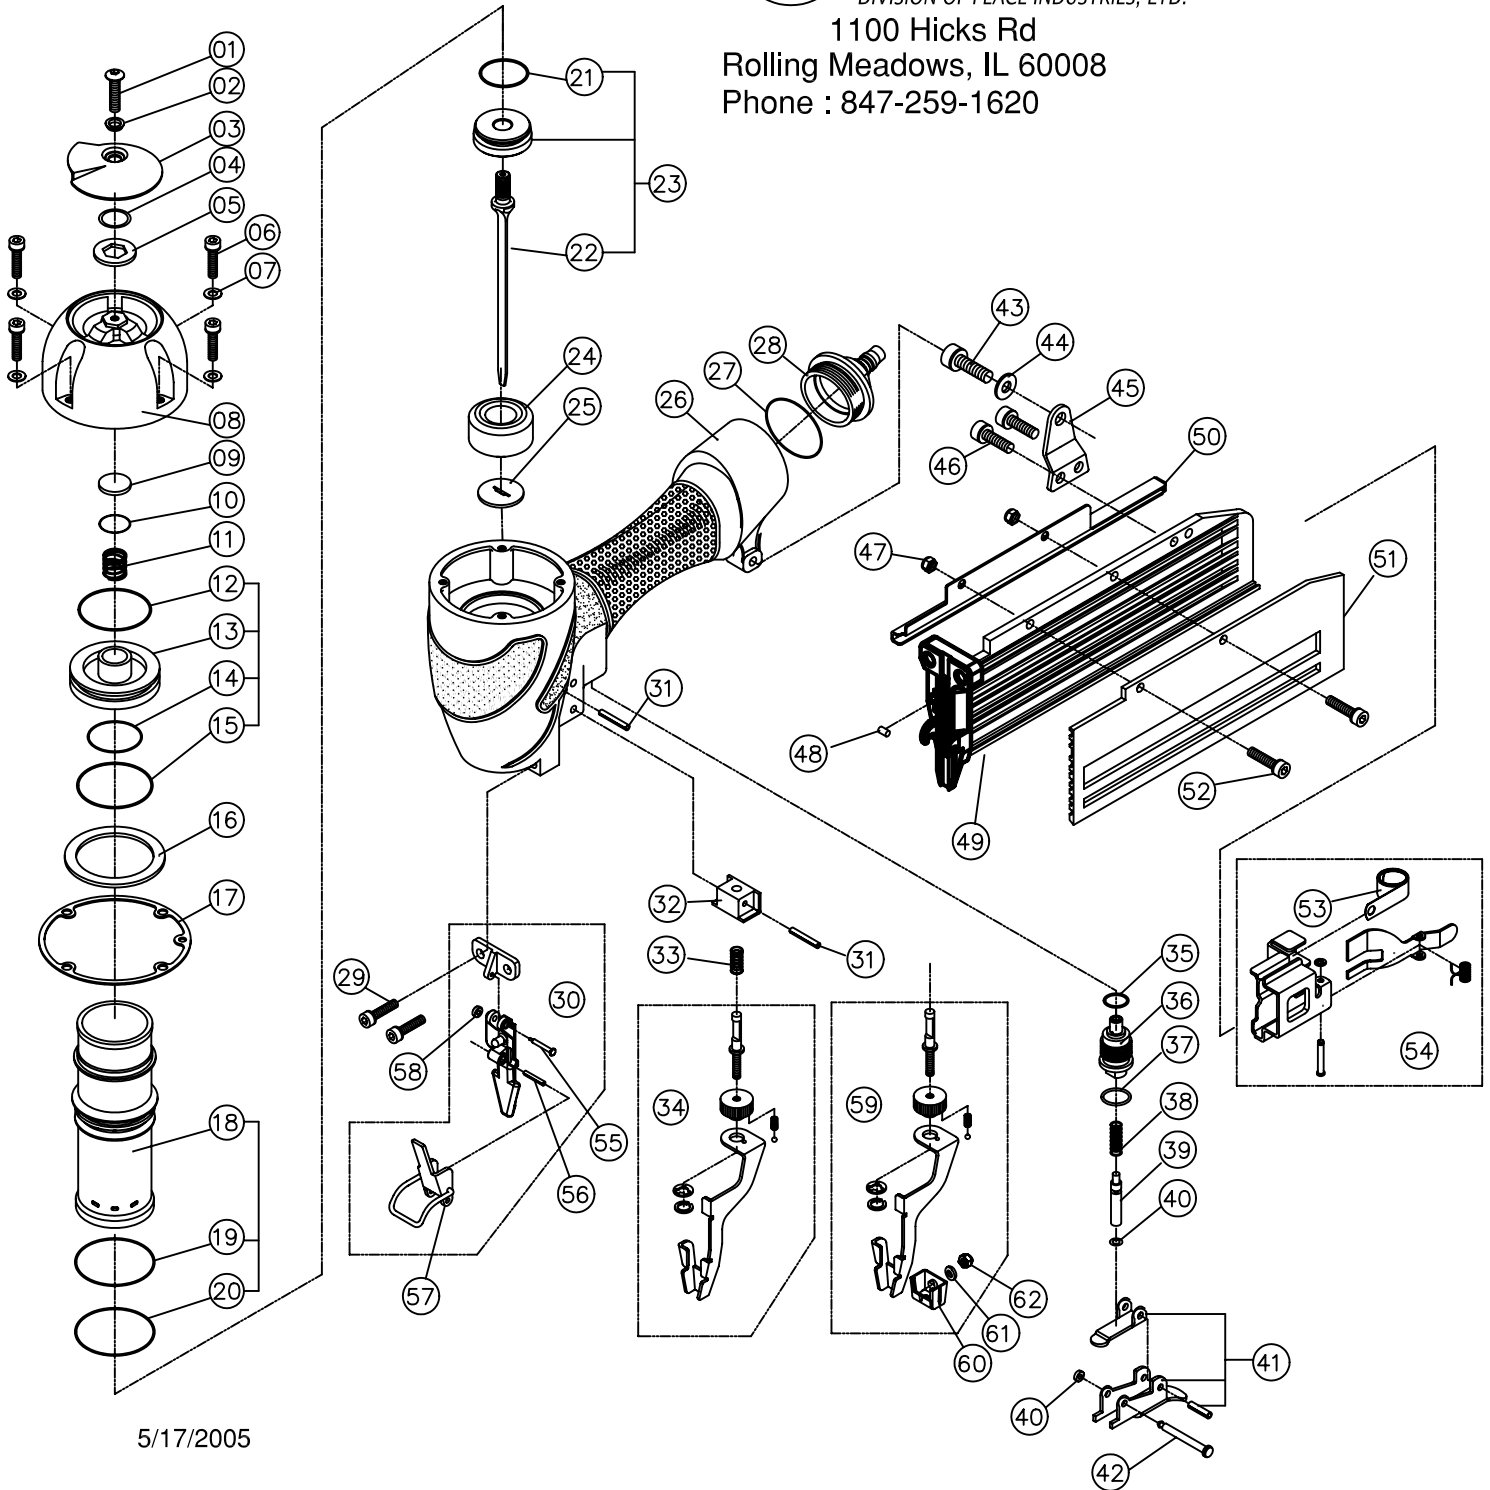

5/17/2005

SPOTNAILS MODEL TB1840

Ref. No.	Part No.	Description
1	P-24370	Screw
2	P-96118	Bushing
3	P-70046	Exhaust Deflector
4	P-64377	O-Ring
5	P-32217	Washer
6	P-24358	Cap Screw
7	P-32211	Flat Washer
8	P-60180	Cap
◆	9	P-15193 Exhaust Seal
◆	10	P-64384 O-Ring
◆	11	P-18331 Poppet Spring
◆	12	P-64232 Poppet O-Ring
◆	13	P-63042 Poppet
◆	14	P-64422 Piston Stop O-Ring
◆	15	P-64234 Cylinder O-Ring
◆	16	P-03081 Guide Spacer
◆	17	P-62079 Gasket
◆	18	P-05106 Cylinder
◆	19	P-64235 Cylinder O-Ring
◆	20	P-64423 O-Ring
◆	21	P-64424 Piston O-Ring
◆	22	P-06239 Driver Blade
◆	23	AS-06057 Piston & Driver Assembly
◆	24	P-15121 Bumper
◆	25	P-15122 Return Seal
◆	26	P-01271 Body
◆	27	P-64425 O-Ring
◆	28	P-60175 End Cap
◆	29	P-24300 Screw
◆	30	AS-10052 Front Plate Assembly
◆	31	P-07262 Pin

Ref. No.	Part No.	Description
32	P-53165	Safety Guide
33	P-18328	Spring
34	AS-53057	Safety Assembly
◆	35	P-64239 O-Ring
◆	36	P-22114 Bleeder Valve
◆	37	P-64241 O-Ring
◆	38	P-18227 Spring
◆	39	P-22179 Plunger
◆	40	P-64240 O-Ring
◆	41	AS-21014 Trigger Assembly
◆	42	P-07327 Trigger Pin
◆	43	P-24307 Screw
◆	44	P-32170 Washer
◆	45	P-13042 Bracket
◆	46	P-24313 Screw
◆	47	P-26126 Nut
◆	48	P-07329 Retainer Pin
◆	49	AS-12164 Magazine Assembly
◆	50	P-12438 Feeder Cover
◆	51	P-12439 Magazine Cover
◆	52	P-24301 Screw
◆	53	P-18234 Negator Spring
◆	54	AS-09039 Pusher Assembly
◆	55	P-07356 Pin
◆	56	P-07353 Pin
◆	57	AS-04036 Latch Assembly
◆	58	P-64434 O-Ring
◆	59	AS-53061 No Mar Tip Assembly
◆	60	P-96129 No Mar Tip
◆	61	P-32227 Washer
◆	62	P-26165 Nut

◆ Parts Included in AS-97301 O-Ring and Seal Kit