


MODEL XS76/8650

SPOTNAILS[®]

DIVISION OF PEACE INDUSTRIES, LTD.
1100 Hicks Rd
Rolling Meadows, IL 60008
Phone : 847-259-1620

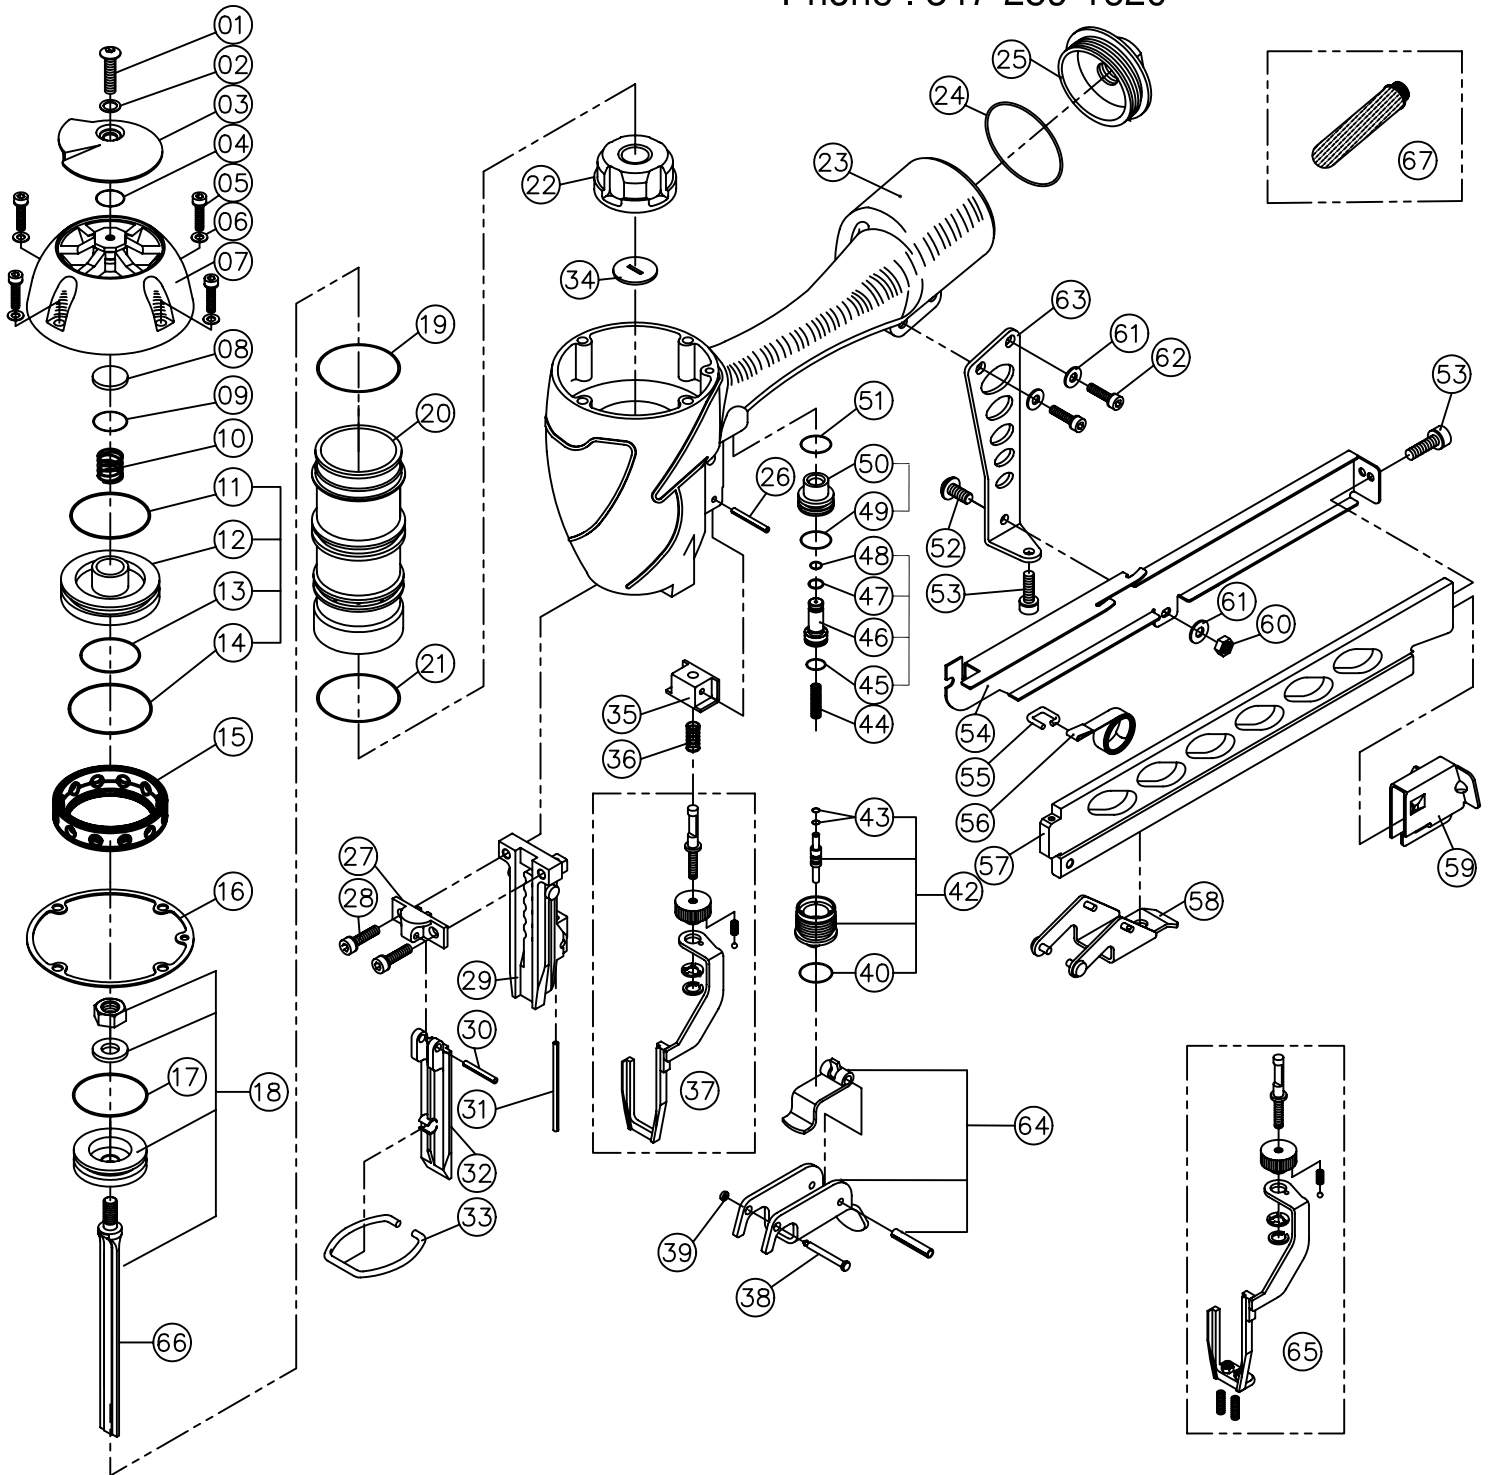

SPOTNAILS MODEL XS76/8650

Ref No.	Part No.	Description
01	P-24370	Screw
02	P-96118	Bushing
03	P-70041	Exhaust Deflector
04	P-64377	O-Ring
05	P-24300	Cap Screw
06	P-32211	Flat Washer
07	P-60172	Cap
◆	08	P-15187 Exhaust Seal
◆	09	P-64378 O-Ring
◆	10	P-18327 Poppet Spring
◆	11	P-64028 Poppet O-Ring
◆	12	P-63037 Poppet
◆	13	P-64379 Piston Stop O-Ring
◆	14	P-64380 Cylinder Seal O-Ring
◆	15	P-03079 Guide Spacer
◆	16	P-62070 Gasket
◆	17	P-64228 Piston O-Ring
◆	18	AS-06035 Piston & Driver Assembly
◆	19	P-64330 Cylinder O-Ring
◆	20	P-05096 Cylinder
◆	21	P-64419 O-Ring
◆	22	P-15188 Bumper
◆	23	P-01269 Body
◆	24	P-64312 O-Ring
◆	25	P-60156 End Cap
◆	26	P-07262 Pin
◆	27	P-10276 Stationary Front Plate
◆	28	P-24358 Screw
◆	29	P-08464 Wear Plate
◆	30	P-07253 Spring Pin
◆	31	P-07257 Safety Yoke Pin
◆	32	P-10277 Removable Front Plate
◆	33	P-18251 Latch Spring

Ref No.	Part No.	Description
34	P-15192	Return Seal
35	P-53165	Safety Guide
36	P-18328	Spring
37	AS-53044	Safety Assembly
38	P-07327	Trigger Pin
◆	39	P-64240 O-Ring
◆	40	P-64328 O-Ring
◆	42	AS-22037 Plunger Assembly
◆	43	P-64383 Plunger O-Ring
◆	44	P-18227 Spring
◆	45	P-64336 O-Ring
◆	46	P-22145 Pilot Valve
◆	47	P-64335 O-Ring
◆	48	P-64334 O-Ring
◆	49	P-64333 O-Ring
◆	50	P-22144 Trigger Valve Cap
◆	51	P-64332 Valve Housing O-Ring
◆	52	P-24370 Screw
◆	53	P-24353 Screw
◆	54	P-12385 Magazine Cover
◆	55	P-18131 Spring Clip
◆	56	P-18298 Negator Spring
◆	57	P-12402 Magazine
◆	58	P-04060 Quick Clear Latch
◆	59	P-09183 Pusher
◆	60	P-26142 Nut
◆	61	P-32170 Washer
◆	62	P-24301 Screw
◆	63	P-13067 Bracket
◆	64	AS-21008 Trigger Assembly
◆	65	AS-99077 Vinyl Siding Attachment Kit (Optional)
◆	66	P-06226 Driver Blade
◆	67	P-97454 Filter (Optional)

◆ Parts Included In AS-97274 O-Ring And Seal Kit